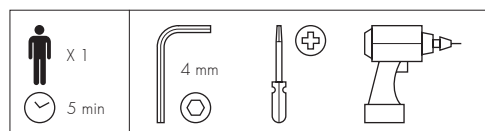





 
 
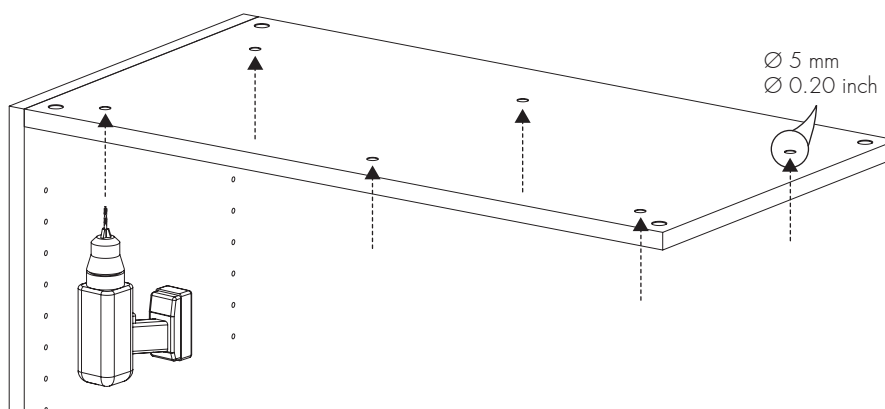
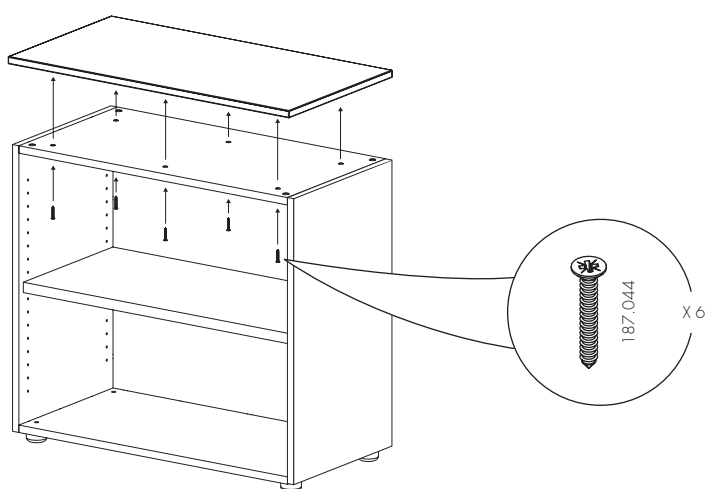
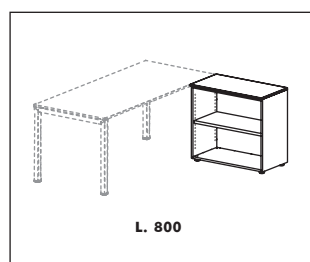
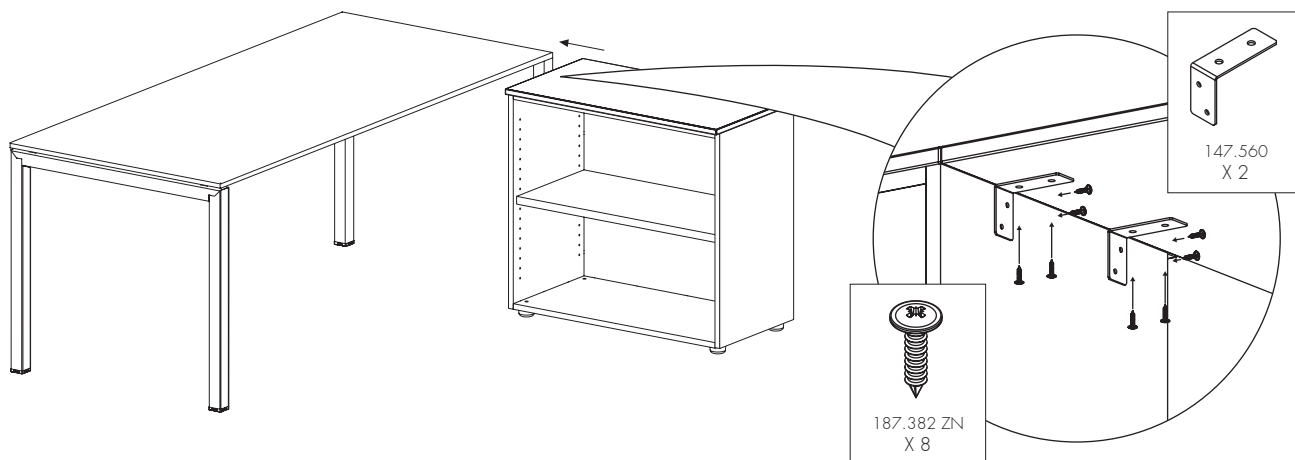
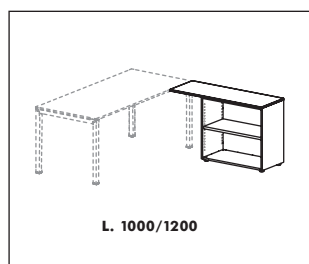


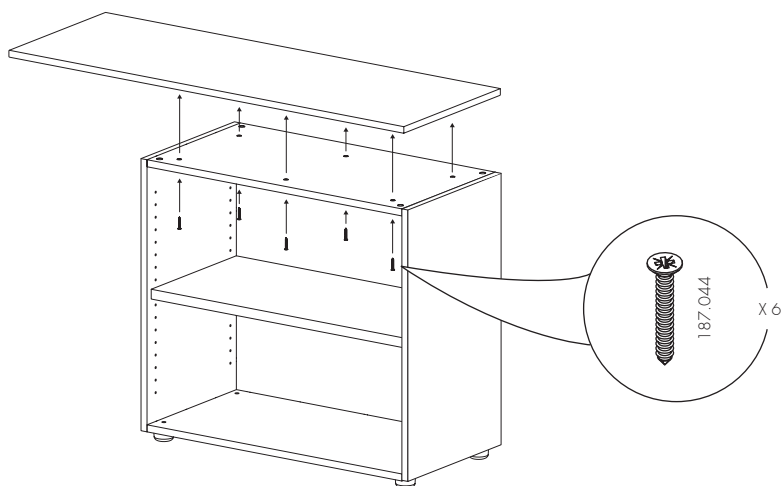
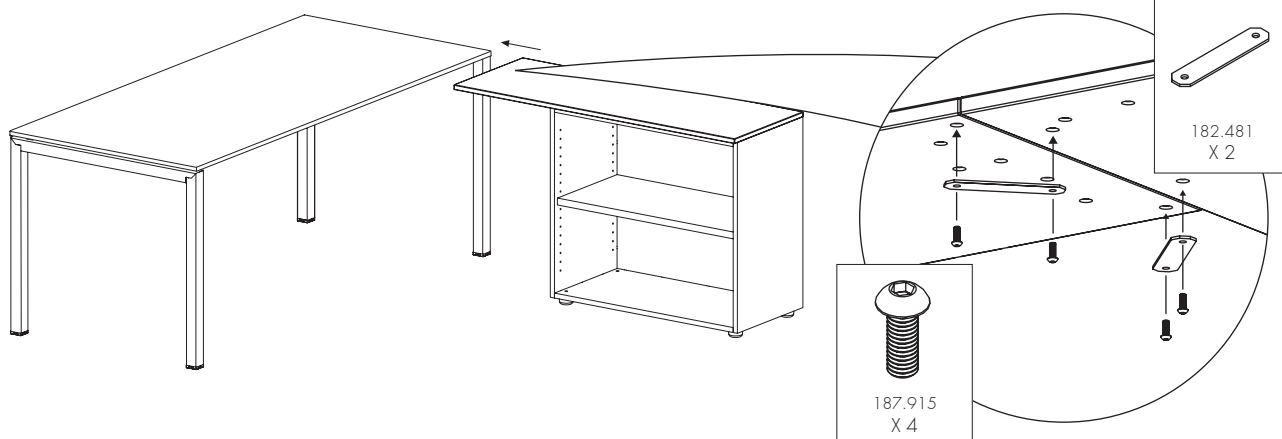
pop easy/square - Return top with cabinet**FREZZA®**


					
	187.382 ZN	187.044	187.915	147.560	182.481
 L. 800 (02-03)	X 8	X 6	—	X 2	—
 L. 1000/1200 (04-05)	—	X 6	X 4	—	X 2

01**02**

pop easy/square - Return top with cabinet**FREZZA®****03****04**

L. 1000/1200

**05**


ASSEMBLAGGIO
 ASSEMBLY
 ASSEMBLÉE

-Per disassemblare il prodotto seguire le istruzioni di assemblaggio a ritroso, invertendo il senso delle frecce.

-To disassemble the product, please follow the assembly instructions in the opposite order, reversing the arrows' direction.


DISASSEMBLAGGIO
 DISASSEMBLY
 DÉMONTAGE

-Pour démonter le produit, suivez les instructions de montage en sens inverse, en inversant le sens des flèches.